VALOR
MULTIMEDIA

18061 Arenth Avenue
City of Industry, CA 91748
888-588-2567
www.valormultimedia.com

NOTE:
(1)This unit is manufactured under license from Dolby Laboratories
(2)"Dolby" and the double-D symbol are trademarks of Dolby Laboratories

NVG-720W

OWNER ' S MANUAL

Contents

Thank you for your choosing a Valor Multimedia product. We hope you will find the instructions in this user manual clear and easy to follow. If you take a few minutes to look through it, you'll learn how to use all the features of your new unit for maximum enjoyment.
After you have finished reading the instructions, please keep this manual in a safe place for future reference.

Preparation · · · · · 1
- Feature · · · · · 1
- Tools and Supplies · · · · · 1
- Warnings · · · · · 1
- Disconnecting the Battery · · · · · 2

Controls and Indicators · · · · · 3
- Button Operation · · · · · 3
- LCD Display / Indicators · · · · · 4
- The Key Areas of Touch Screen · · · · · 5

Remote Control · · · · · 6
- Front Zone Remote Control · · · · · 6
- Rear-Zone Remote Control · · · · · 7
- Smart Dial Remote Control · · · · · 8

TFT Monitor Operation · · · · · 10
- Open/Close TFT Monitor · · · · · 10
- TFT Monitor Auto Open · · · · · 10
- Monitor Tilt Angle Adjustment · · · · · 10
- Rear Camera Mode · · · · · 10
- Image Setting · · · · · 10
- Parameter Adjustment Procedure · · · · · 11
- Parking Brake Interlock · · · · · 11
- Monitor Movement Mechanism · · · · · 11

Operating Instructions · · · · · 12
- Power On / Off · · · · · 12
- Playing Source Selection · · · · · 12
- Volume Adjustment · · · · · 12
- Audio Control Menu · · · · · 12
- Six-Channel Audio Control · · · · · 14
- Rear Zone · · · · · 14
- System Reset · · · · · 14
- Mute · · · · · 14

System Setup Menu · · · · · 15
- MAIN Menu · · · · · 15
- Screen Setting · · · · · 16
- General Setup Menu · · · · · 16
- ASP(Audio Signal Processing) Configuration Menu · · · · · 18
- Rear-Zone Operation · · · · · 20
- Standby · · · · · 21

VALOR MULTIMEDIA

Tuner Operation · · · · · 22
- Tuner TFT Display · · · · · 22
- Switch to Radio Tuner source · · · · · 22
- Select FM/AM Band · · · · · 23
- Auto Tuning · · · · · 23
- Manual Tuning · · · · · 23
- Using Preset Stations · · · · · 23
- Auto Store (AS) · · · · · 23
- Program Scan (PS) · · · · · 24
- Local Radio Stations Seeking (LOC) · · · · · 24

DVD Player Operation · · · · · 25
- Opening/Closing the TFT Video Screen · · · · · 25
- Insert/Eject Disc · · · · · 25
- Reset the Loading Mechanism · · · · · 25
- Accessing DVD Mode · · · · · 25
- Using the Touch-Screen Controls · · · · · 25
- Controlling Playback · · · · · 26
- Accessing the DVD Menu · · · · · 26
- Moving Through Chapters · · · · · 27
- Fast Forward/Fast Reverse · · · · · 27
- Selecting 2-Channel or 6-Channel Audio Playback · · · · · 27
- GOTO Search · · · · · 28
- Direct Chapter / Track Selection · · · · · 28
- Viewing an Alternate Picture Angle (DVD Only) · · · · · 29
- Zooming · · · · · 29
- Multi-Language Discs (DVD Only) · · · · · 29
- Playback Information · · · · · 29
- General Disc Information · · · · · 30

DVD Setup Menu · · · · · 32
- Accessing the DVD Setup Screen · · · · · 32
- LANGUAGE Menu · · · · · 32
- ASP SET Menu · · · · · 33
- VIDEO Menu · · · · · 33
- SPEAKER Menu · · · · · 34
- RATING (Parental Lock) Menu · · · · · 35

CD/MP3/WMA/JPEG Operation · · · · · 36
- CD Player User Interface · · · · · 36
- MP3/WMA Discs · · · · · 37
- JPEG Discs · · · · · 38

SD Card Reader Operation · · · · · 39
- Accessing SD Card Mode · · · · · 39
- Using the Touch-Screen Controls · · · · · 39

iPod Operation 40
Accessing iPod Mode 40
iPod Instructions 40
Playback of video on iPod 41
Sat Radio Operation 42
Accessing Sat Radio Mode 42
Auto Scan 42
Manual Scan 43
Storing a Channel 43
Recalling a channel 43
Bluetooth Operation 44
Before using the Bluetooth 44
The Bluetooth Indicator 44
Accessing the Bluetooth Mode 44
Bluetooth User Interface 44
Phone Book 45
Bluetooth Setup 45
Pairing 46
Auto Connect 46
Making a phone call 46
Answering an incoming call 46
End a call 47
Navigation Operation 48
Access the Navigation mode 48
Inavigation Operation 48
How to Listen to an Audio program While Using/viewing the Navigation 48
Troubleshooting 49
Specifications 54

NOTE:

1. certain description in the book may differ from the actual unit.
2. Some pictures or icons in the book may differ from actual display.
3. Specifications subject to change without notice.

VALOR MULTIMEDIA

Preparation

Please read all of the instructions below before beginning your installation. We recommend that you have your unit installed by an experienced mobile video/navigation installer.

Features

•Single DIN size, all-in-one integrated entertainment system
•Built-in DVD Player, automotive specification slot loading mechanism
•Built-in ISS FM/AM Tuner.
•SD card reader with READ/PLAY functionality.
•Built-in Bluetooth hands-free dial/answer for connection to Bluetooth enabled handsets.
•High resolution 7”(16:9) TFT color monitor, contrast and brightness adjustment.
•Built-in 50W X 4 output amplifier, 5.1 channel surround sound output.
•Dual zone function with easy operation.
•Smart Touch-screen operation.
•All functions can be operated by included Remote Controls.
•Rear zone remote control operation.
•”Smart Dial” remote control operation.
•Built-in Satellite Radio Control, Built-in iPod Control, Navigation Ready.
•Powerful Graphic User Interface and software update ability.

Tools and Supplies

We suggest using these tools and supplies to install the unit.
• Torx type, flat-head and Philips screwdrivers
• Wire cutters and strippers
• Tools to remove existing radio (screwdriver, socket wrench set or other tools)
• Electrical tape
• Crimping tool
• Multimeter
• Crimp connections
• 18 gauge wire for power connections
• 16 – 18 gauge speaker wire
• Heatshrink tubing
• Soldering iron and solder

Warnings

1. Only connect the unit to a 12-volt negative ground system.
2. Never install this unit where operation and viewing could interfere with safe driving conditions.
3. To reduce the risk of a traffic accident (except when using for rear view video camera) never use the video display function while driving the vehicle. This may be in violation of local laws.
4. To reduce the risk of a traffic accident, never driving with the sound at a level that prevents you from hearing sounds outside around the vehicle.
5. Never disassemble or adjust the unit without the assistance of a professional. For details, please consult your local car stereo specialty shop.

6. To prevent injury from shock or fire, never expose this unit to moisture or water.
7. Never use irregular discs, the only recommended disc size is a 12cm round disc.
8. To prevent damage to the mechanism inside this unit, avoid impact to the TFT monitor.
9. Do not change the fuse on the power wire without professional guidance. Using an improper fuse may cause damage to the unit and result in a fire.
10. The monitor employs an automatic motorized mechanism. To prevent damage to the core mechanism, please do not push, pull or swivel the monitor manually.

Disconnecting the Battery

To prevent a short circuit, turn off the ignition and remove the negative (-) battery cable prior to starting the installation.

NOTE: *If the unit is to be installed in a car equipped with an on-board drive or navigation computer, do not disconnect the battery cable. If the cable is disconnected, the computer memory may be lost. Under these conditions, use extra caution during installation to avoid causing a short circuit.*

NOTE: *It is especially important that you read the **WARNINGS** and **NOTES** in this manual.*

Controls and Indicators

Button Operation

1.POWER OFF/VOL
Rotary encoder.
Press the encoder to turn on the unit, press and hold to turn off.
Rotate clockwise/counterclockwise to adjust the volume.
Press to enter the audio adjust menu when the unit is on.
Press to answer an incoming call (if the unit has been connected to a Bluetooth enabled cell phone).
2. **IR REMOTE CONTROL RECEIVER**
3. **SRC**
Press to select a source.
Press and hold to toggle rear zone mode On/Off.
4. **MUTE**
Press the button ( ) to mute the volume, and press the button again to restore the volume.
5. **PREVIOUS**
6. **NEXT**
7. **PLAY/PAUSE**
Press to play/pause.
8. **BLUETOOTH MICROPHONE**
9. **SD CARD SLOT**
10. **DISC SLOT**
11. **RESET**

12. **SMART DIAL**
Rotary encoder.
Press the encoder to access MAIN menu.
Rotate clockwise/counterclockwise to select a desired item and press to access or confirm.
Press to reject/end an incoming call while operating a phone source.
13. **EJECT**
Press once to eject the disc.
Hold to reset loading mechanism.
14. **INFO**
Press to display playback information on the screen on DVD mode, if the TFT monitor is closed
DVD playback information will display on the LCD screen.
Press and hold to access the picture setup.
15. **ANGLE+**
Press the button to adjust the upward tilt angle of the screen one step at a time.
Press and hold this button to continuously adjust the upward tilt.
Press this button to adjust the picture settings in picture setup.
16. **ANGLE-**
Press the button to adjust the downward tilt angle of the screen one step at a time.
Press and hold this button to continuously adjust the downward tilt.
Press this button to adjust the picture settings in picture setup.
17. **TFT DISPLAY**
18. **OPEN**
Press the OPEN button to activate the motorized system and move the TFT monitor into viewing position.
Press again to close the TFT.
19. **DISP/NAVI**
Press to display system information on the front LCD screen when the main screen is closed.
When main screen is open, press to select Navigation mode
20. **LCD DISPLAY**
21. **AS/PS (Auto store/program scan)**
Press to auto store strong radio stations in the 12 preset channels in the current band.
Press and hold to start to scan The preset radio station
22. **FM/AM**
Press to change among the following bands: FM1,FM2,FM3,AM
23. DISC INDICATOR LIGHT
It is blue when there is no disc in the unit.
It is red when there is disc in the unit.

LCD Display / Indicators

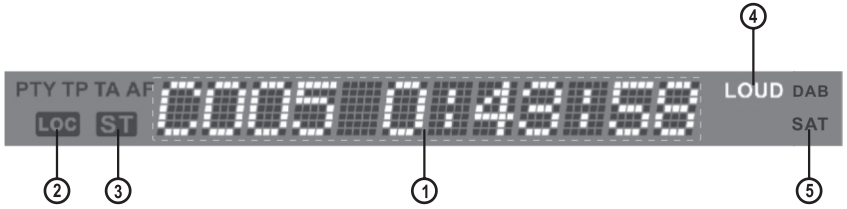

1.Main display area, displays the time, tuning frequency and other text information.
2.Local indicator, Indicates the local radio station seeking function is activated or not
3.Stereo broadcasting indicator, Indicates the radio is in stereo mode or not
4.Loudness indicator, Indicates the LOUD function is activated or not.
5.Satellite (SAT) radio indicator

The key areas of touch screen

The touch key areas are outlined below, for DVD, VCD mode and all other operating modes.

A — Return to MAIN MENU
B — Display playing information
C — Select previous chapter
D — Select next chapter
E — Display the on-screen controls, and different mode displays different menu
F —On DVD/VCD mode, display the GOTO search menu on the screen directly

Remote Control

Front Zone Remote Control

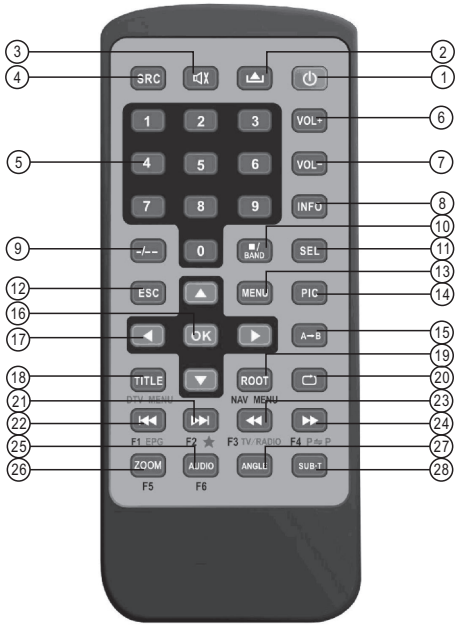

Name	Ref #	Signal	Function
Power	1	⏻	Turn the power on/off
Open	2	⏏	Open/close the motorized screen
Mute	3	🔇	Toggle on/off audio output
SRC	4	SRC	Select playing mode
Numeric button	5	1 2 3 4 5 6 7 8 9 0	Directly access certain chapter / track / preset station in current band
VOL up	6	VOL+	Increase the volume
VOL down	7	VOL−	Decrease the volume
Information	8	INFO	Display playing information
GOTO search	9	-/--	Position search function on VCD/DVD mode
Stop/Band	10	■/ BAND	Select FM/AM band on Tuner mode Stop playback
Select	11	SEL	Enter the audio settings
ESC	12	ESC	Exit the current menu
Menu	13	MENU	Enter the main menu of system
Picture	14	PIC	Adjust the picture settings
Repeat A—B	15	A→B	Set start point A and end point B to repeat continually
OK	16	OK	Start or pause playback, confirm the settings
Direction buttons	17	▲▼ ◀▶	Up/down/left/right to select items for setting

Name	Ref #	Signal	Function
Title	18	TITLE	Also can activate and disable SCAN mode while playing CD
Root	19	ROOT	Enter the main menu of the disc Turn on PBC while playing VCD
Repeat	20	🔁	Repeat playback for current chapter
Next	21	⏭	Select the next chapter/track for playback Search an available radio station by increasing tuning frequency on tuner mode
Previous	22	⏮	Select the previous chapter/track for playback Search an available radio station by decreasing tuning frequency on tuner mode
Fast Reverse	23	◀◀	Fast reverse the disc content
Fast Forward	24	▶▶	Fast forward the disc content
Audio	25	AUDIO	Change the audio language for disc playback
Zoom	26	ZOOM	Zooming in/out on an image
Angle	27	ANGLE	Play in different angle for a scene scene(if it is applicable)
SUB Title	28	SUB·T	Language selection for subtitle

Rear-Zone Remote Control

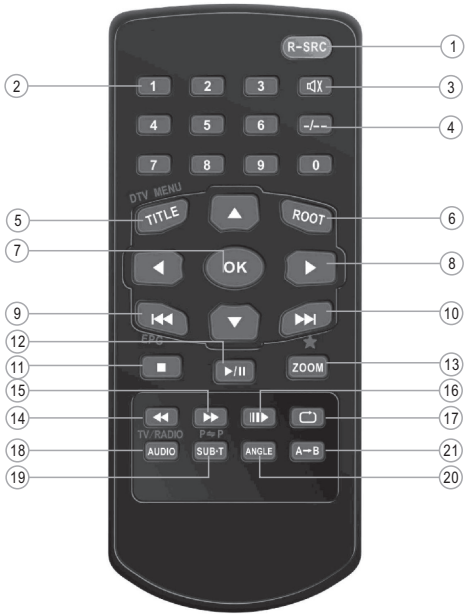

Name	Ref #	Signal	Function
R-SRC	1	SRC	Select rear playing sources
Numeric button	2	1 2 3 4 5 6 7 8 9 0	Directly access certain chapter / track / preset station in current band
Mute	3		Toggle on/off audio output
GOTO search	4	-/--	Position search function on VCD/DVD mode
Title	5	TITLE	Also can activate and disable SCAN mode while playing CD
Root	6	ROOT	Enter the main menu of the disc Turn on PBC while playing VCD
OK	7	OK	Start or pause playback, confirm settings
Direction buttons	8	▲ ▼ ◀ ▶	Up/down/left/right to select items for setting
Previous	9	⏮	Select the previous chapter/track for playback Search an available radio station by decreasing tuning frequency on tuner mode
Next	10	⏭	Select the next chapter/track for playback Search an available radio station by increasing tuning frequency on tuner mode
Stop	11	■	Stop playback
Play/pause	12	▶/II	Start/pause playback
Zoom	13	ZOOM	Zooming in/out on an image
Fast Reverse	14	◀◀	Fast reverse the disc content
Fast Forward	15	▶▶	Fast forward the disc content
Slower Play	16	III▶	Slow forward playback
Repeat	17		Repeat playback for current chapter
Audio	18	AUDIO	Change the audio language for disc playback
SUB Title	19	SUB·T	Language selection for subtitle
Angle	20	ANGLE	Play in different angle for a scene scene(if it is applicable)
Repeat A—B	21	A→B	Set start point A and end point B to repeat continually

Smart Dial Remote Control

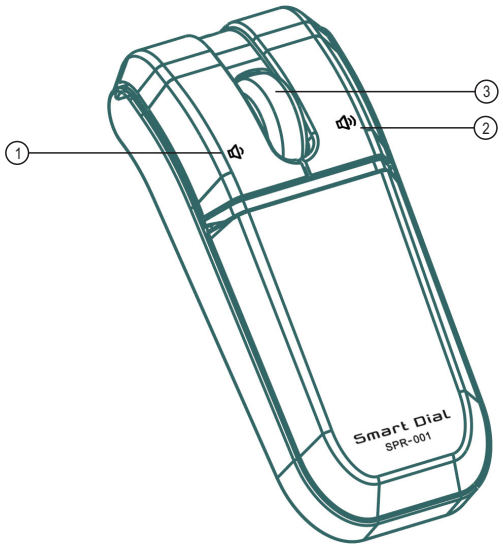

VOL down	1	VOL-	Decrease the volume
VOL up	2	VOL+	Increase the volume
Smart Dial	3		Press this encoder to access system setup. Rotate up/down to select a desired item and press once to access or confirm.

NOTE: *The buttons of NAV MENUF1\F2\F3\F4\F5\F6 are used on the navigation mode. If your unit has the navigation function, please read the user manual of navigation to find the functions of the buttons.*

TFT Monitor Operation

Open/Close TFT Monitor

Press the (⏏) button on the front panel or on the front zone remote control to open/close the monitor.

TFT Monitor Auto Open

If “TFT Auto Open” is “On”, when the unit is turned on, the monitor automatically opens to the last viewing position, and closes automatically when the unit is turned off.

If “TFT Auto Open” is “Off”, when the unit is turned on, the monitor will not open automatically, but will close automatically when the unit is turned off. You can press the (⏏) button on the front panel or on the remote control to move the monitor into the desired viewing position.

If “TFT Auto Open” is “Manual”, when the unit is turned on or turned off, the monitor has no movement.

See “General setting” for details.

Monitor Tilt Angle Adjustment

The monitor angle can be adjusted for optimum viewing using one of the following methods:

Press the (^) or (v) buttons on the front panel to adjust the tilt angle of the screen one step at a time.

Press and hold the (^) or (v) buttons to continuously adjust the tilt angle.

Adjust the “Screen Tilt” in the “Screen setting” to adjust the tilt of the screen to the desired degree.

Rear Camera Mode

When the vehicle is placed in "Reverse", and an optional rear camera is connected to the unit, The TFT monitor will automatically switch to the camera input source.

Image Setting

Video Output Format

The table below shows the video output format for each source.

Video Output Format

Name	Video Output Format
FM/AM TUNER	RGB Mode
DVD	RGB Mode
NAVI	RGB Mode
AUX IN	CVBS Mode
CAMERA	CVBS Mode
iPod(video)	CVBS Mode
SAT	RGB Mode

*CVBS-- Composite Video Base band Signal

Adjustable Parameters

While in RGB mode, the only parameter that can be adjusted is brightness (BRIGHT). To access “SHARPNESS” “COLOR” “CONTRAST” “BRIGHTNESS” and “TINT ”you must be in CVBS Mode.

VALOR MULTIMEDIA

Parameter Adjustment Procedure

1. Enter Picture Quality Setting Mode:

Press the PIC button on the remote or press and hold the INFO button on the front panel of the unit.

2. Select Items to Set:

Press the (▲ / ▼) buttons on the remote or rotate the SMART DIAL button clockwise/anticlockwise to select an item.

3. Set Parameters:

Rotate the“ VOL” on the front panel can also adjust the selected feature.

4. Exit Picture Quality Setting Mode:

Press the PIC button on the remote or press and hold the INFO button on the unit.

NOTE: *A video source must be connected to the AUX input and be playing to access the above Adjustments.*

Parking Brake Interlock

1. When the “PARKING” lead is properly connected to the brake switch, the display on the TFT monitor will display video only when the vehicle is stopped and the parking brake is applied.
2. Parking brake function is overridden when the video source is set to CAMERA.
3. When the “parking brake interlock” is active, the front monitor displays a caution message with blue background, preventing the driver from watching video while driving to reduce the risk of a traffic accident. Rear video screens are not affected.

Please see “INSTALLATION SECTION” for installation.

Monitor Movement Mechanism

If an obstruction occurs on the monitor path, the motion will stop automatically to prevent damage for the mechanism or monitor.

Normal operation is resumed by pressing the OPEN button (⏏) or restart the unit while “TFT Auto Open” is “On”.

Operation Instructions

Power On / Off

Press the POWER OFF /VOL button to turn the unit on. The buttons on the front of the unit are illuminated and start up message is briefly displayed on the LCD screen, and then displays the current mode status. You can also turn on the unit by pressing the POWER button (⏻) on the remote control.

Press and hold the POWER OFF /VOL button on the front panel for more than 1 second or press the POWER button (⏻) on the remote to power off the unit. The monitor is drawn back into the main compartment and the LCD screen displays “BYE BYE”.

NOTE: *The operating voltage range is 10.5v~16v. The unit will power off automatically to protect itself, when the voltage is out of the operating range.*

PlayingSource Selection

Press the SRC button on the front panel or the (SRC) button on the remote to select among the available sources: TUNER, Disc, iPod,, AUX IN, CAMERA (rear view video camera), Bluetooth,NAVI ,SAT and SD Card. The selected playing mode is displayed on the TFT or LCD screen.

AUX IN Mode

An external peripheral device can be connected to this unit via RCA cables to the “AUX-IN”.

CAMERA Mode

“CAMERA” mode is only available when the camera is connected and when backing up. To install a rear view video camera, connect the CAMERA video input cable to the rear view camera Output cable.

NOTE: *If you have not connected a device to the unit, the source can not be selected. Example: If you have not connected an iPod to the unit, the iPod source will not be available.*

Volume Adjustment

To increase or decrease the volume level, turn the POWER OFF/VOL on the front panel or press the VOL+/ VOL- buttons on the remote control. The volume ranges from “0” to “40”. The default volume is “10” when the unit is powered on each time. Default volume memory setup: Rotate Smart Dial/VOL knob on the front panel to select volume value and then press and hold the Smart Dial/VOL button until you hear a single beep. When you hear the beep, setup is completed.

Audio Control Menu

The Audio Control feature allows you to easily adjust your audio system to meet the acoustical characteristics of your vehicle, which vary depending on the type of vehicle and its measurements. To get the best possible sound quality from your new system, be sure to adjust the settings for the speakers as well. Proper setting of the Fader and Balance boosts the effects of the cabin equalizer.

Accessing the Audio Control Menu

Press and hold the POWER OFF/VOL button on the front panel once or press the (SEL) button on the remote control to enter the “Audio” menu.

Selecting an Audio Feature for Adjustment

Press the (▲ / ▼) buttons on the remote or press the POWER OFF/VOL button on the front panel once to select an audio feature to be adjusted or rotate the “Smart Dial ”on the front panel to select.

Adjusting an Audio Feature

Press the (◀ / ▶) buttons on the remote or rotate the POWER OFF/VOL clockwise/counterclockwise to adjust the selected feature to the desired setting.

Audio Adjustments

Audio Adjustments

Audio Function	Adjustable Range
EQ	User
	Flat
	Jazz
	Pop
	Classical
	Rock
	News
	Urban
	Rave
	Movie
	Techno
BASS	–7 to +7
TREBLE	–7 to +7
FADE	–9 to +9
BAL	–9 to +9
S W	–7 to +7
LOUD	Off, Level1-4

NOTE: *The Bass and Treble levels are only adjustable when EQ is on “User” mode.*
The Loudness function compensates for deficiencies in sound ranges at low levels. Loudness levels range from 1-4 or “off”. When the Loud function is on, LOUD is displayed on the screen.

Exiting the Audio Control Menu

Press and hold the POWER OFF/VOL button on the front panel to exit the audio control menu, or press the escape arrow on the top right corner of the TFT display.

Press the (ESC) button on the remote control to exit the audio control menu.

Six-Channel Audio Control

6-Channel Audio Adjustments

Item	Adjustable Range
Master Volume	00 to 40
Front Left Channel Volume	-10 to +10
Front Right Channel Volume	-10 to +10
Rear Left Channel Volume	-10 to +10
Rear Right Channel Volume	-10 to +10
Center Channel Volume	-10 to +10
Subwoofer Volume	-10 to +10

Rear Zone

If a monitor is installed in the rear zone and connected to the rear zone AV output, passengers in the back seat can control the DVD output using the rear zone remote control. See “Rear-Zone Remote Control” for instructions.

System Reset

To correct a system halt or other unusual operation, use the tip of a pen to press the RESET button located on the front bottom-right corner of the unit. After a system reset, the unit restores the settings before last power off.

Mute

The volume will be muted when the following cases occur:

• Automatic: audio output mutes when a telephone call is received by the car phone or when verbal navigation is performed.

• When the “MUTE” wire is connected to a cell phone that will output a mute signal to the “MUTE” Wire.

• Manual: Press the MUTE button ( ) on the front panel or the MUTE button ( ) on the remote to mute the volume from the unit.

NOTE: *Press the MUTE button again to restore the volume.*

Adjusting the volume or using any of the audio set-up features will cancel the mute function.

System Setup Menu

MAIN Menu

There are three methods to access the MAIN menu.

•Press the MENU button on the front panel .

•Press the MENU button on the remote control.

•Touch the A area on the touch-screen.

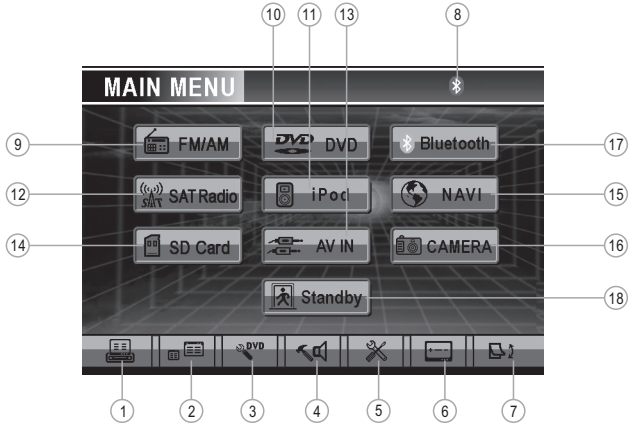

1.Touch to access Front-Zone menu.
2.Touch to access Rear-Zone menu.
3.Touch to access DVD setup.
4.Touch to access ASP setup.
5.Touch to access General setup.
6.Touch to access Screen setup.
7.Touch to turn to the previous menu.
8.Bluetooth indicator.
9.Touch to access Tuner mode.
10.Touch to access DVD mode.
11.Touch to access iPod mode.
12.Touch to access SAT Radio mode.
13.Touch to access AUX IN mode.
14.Touch to access SD Card mode.
15.Touch to access Navigation mode.
16.Touch to access Camera mode.
17.Touch to access Bluetooth mode.
18.Touch to access the Standby mode.

Note: *Remote, Smart dial, touch screen operations and buttons on front panel are all useable to select menu and adjust settings. The following instructions will show the different ways to access menus and adjustments.*

Screen Setting

Accessing the Screen Setup Menu □

•Press the SMART DIAL on the front panel or press the (MENU) button on the remote control to access MAIN menu.

•Select the SCREEN SETUP button on the right bottom of the screen to access the Screen setup.

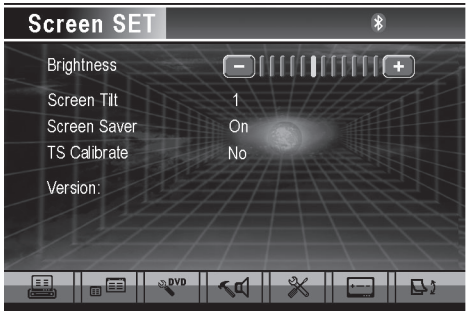

Selecting a Feature for Adjustment

Press the (▲ / ▼) buttons on the remote to select a feature to be adjusted.

Rotate SMART DIAL clockwise/counterclockwise to select a feature to be adjusted.

Directly touch the options on the screen to select a feature to be adjusted.

Adjusting a Feature

Adjusting a Feature

Setting	Options	Function
Brightiness	–10 to +10	Press the (◀/▶) buttons on the remote or rotate the SMART DIAL clockwise/counterclockwise to adjust the Brightness to the desired setting.
Screen Tilt	1–6	Press the (◀/▶) buttons on the remote or touch the (1 to 6) number on the screen directly to adjust the tilt of the screen to the desired degree.
Screen Saver	On	Touch to activate/deactivate the Screen Saver.
	Off	
TS Calibrate	No	Touch “Yes” to enter the touch screen calibrate mode.
	Yes	
Version		The version of this unit.

General setup Menu

Accessing the General Setup Menu

•Select the TOOLS button on the bottom of the touch screen to access the General setup.

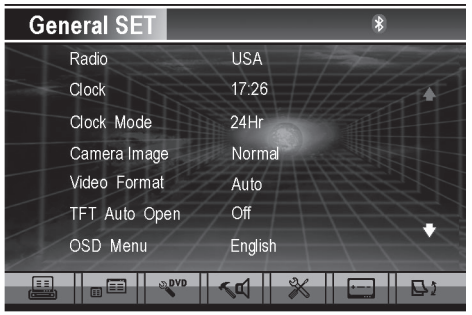

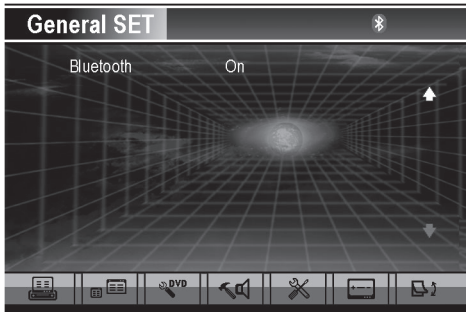

Selecting a Feature for Adjustment

Press the direction buttons on the remote control or touch the option directly on the screen to select the feature to be adjusted.

Adjusting a Feature

1. Enter the option field for the feature you want to adjust by pressing the (OK) button on the remote or by pressing the SMART DIAL button. A submenu appears in a second row with the selected option.
2. Select a new value by pressing the direction button.
3. Confirm your selection by pressing (OK) button or pressing the SMART DIAL button. The new value setup is complete.

Adjusting the Clock

1. Access the “Clock” setting under the General Setup menu.
2. Press the direction button on the remote to move the cursor to the “Hour” or “Min” position, and press the (OK) button. You also can touch the “Hour” or “Min” position directly.
3. The numeric keypad will pop up.
4. Press the numeric button on the remote control or touch the numeric keypad on the screen to adjust the hour or minutes.
5. Press the (OK) button on the remote control or on the keypad of the screen to confirm setup.

Return to normal playback

The system will automatically return the previous playback mode that it was in before accessing the setup menu 20 seconds after the last operation.

Setting	Options	Function
Radio	USA	Select the appropriate setting based on the country in which you reside.
	S-America1	
	S-America2	
	Europe	
	Korea	
	China	
	Arabia	
Clock	(HH:MM)	See “Adjusting the clock” to learn how to set the clock.
Clock Mode	12Hr	Clock displays 12 hour time using AM and PM
	24Hr	Clock displays 24 hour time up to 23:59
Camera Image	Normal	The output of Camera Image is in normal mode
	Reverse	The output of Camera Image is in reverse mode
Video Format	Auto	The video output is switched automatically based on the current disc.
	NTSC	The video output is in the standard NTSC format
	PAL	The video output is in the standard PAL format
TFT Auto Open	On	The TFT panel automatically opens when the unit is turned on.
	Off	You must press the ⏏ button on the TFT panel or the ⏏ button on the remote to open the TFT.
	Manual	The TFT panel will remain in position until the user opens or closes the screen.
OSD Menu	English	The menus are displayed in English only.
Bluetooth	On	Select to activate/deactivate the Bluetooth function.
	Off	

ASP(Audio Signal Processing) Configuration Menu

The ASP Configuration menu allows you to make fine audio adjustment.

Accessing the ASP Configuration Menu

Press the MENU on the front panel or press the (MENU) button on the remote control to access MAIN menu.

Select the SPEAKER TOOLS button on the bottom of the screen to access the ASP setup.

A menu appears with the option for the first item, and then you can touch the ▼button to the option on the next page, press the ▲ button to return.

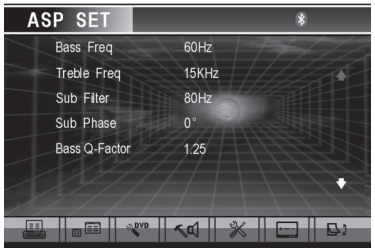

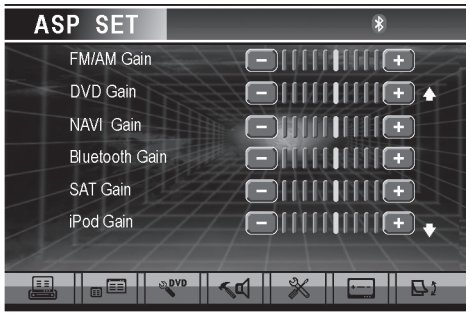

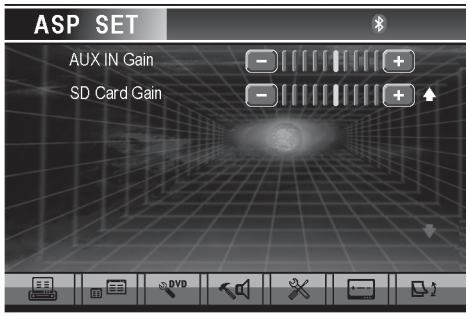

Selecting a Feature for Adjustment

Press the direction buttons on the remote control or touch the option directly on the screen to select a feature to be adjusted.

Adjusting a Feature

1. Enter the option field for the feature you want to adjust by pressing the (OK) button on the remote or by pressing the SMART DIAL. A submenu appears in a second row with the selected option.
2. Select a new value by pressing the direction button.
3. Confirm your selection by pressing (OK) button on the remote control or pressing the SMART DIAL on the front panel. The new setup is complete.

Return to normal playback

The system will automatically return the previous playback mode that it was in before accessing the setup menu 20 seconds after the last operation.

Setting	Options	Function
Bass Freq	60Hz	Depending on the audio source, select the Bass Center Frequency to achieve the best Bass effect.
	80Hz	
	100Hz	
	130Hz	
	150Hz	
	200Hz	

Setting	Options	Function
Treble Freq	10KHz	Depending on the audio source, select the Treble Center Frequency to achieve the best Treble effect.
	12.5KHz	
	15KHz	
	17KHz	
Sub Filter	80Hz	Selecting a crossover frequency sets a cut-off frequency of the subwoofer's LPF(low-pass filter) and the "SMALL" speakers' HPF (high-pass filter). The Crossover frequency setting has no effect if the subwoofer is set to "Off" and any other speaker is set to "Large".
	120Hz	
	160Hz	
Sub Phase	0°	Subwoofer output IN phase
	180°	Subwoofer output OUT OF phase
		NOTE: *Depending on your installation, reversing the subwoofer phase may increase bass output.*
Bass Q-Factor	1.0	When the Bass Center Frequency is selected, adjusting the Bass Q-Factor alters the sharpness of the Bass output.
	1.25	
	1.5	
	2.0	
FM/AM Gain	-07 ~ +07	Adjust the FM/AM gain
DVD Gain	-07 ~ +07	Adjust the DVD gain
NAVI Gain	-07 ~ +07	Adjust the NAVI gain
Bluetooth Gain	-07 ~ +07	Adjust the Bluetooth gain
SAT Gain	-07 ~ +07	Adjust the SAT gain
iPod Gain	-07 ~ +07	Adjust the iPod gain
AUX IN Gain	-07 ~ +07	Adjust the AUX IN gain
SD Card Gain	-07 ~ +07	Adjust the SD Card gain

Rear-Zone Operation

Independent sources can be played simultaneously on the unit. For example, the FM/AM tuner can be listened to by the front passengers, while DVD video is available to rear passengers.

Access Rear-Zone

1.Touch the REAR ZONE button on the bottom of the display to access the Rear-Zone menu and you can select a source to play.

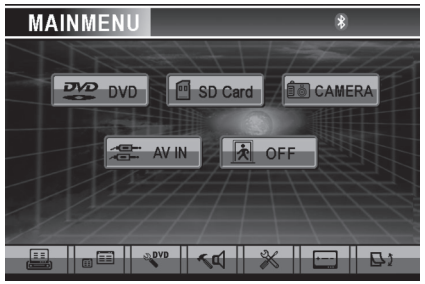

2. Use the Rear-Zone Remote Control to access the Rear-Zone and select a source to play.
3. Press and hold the SRC button on the front panel to toggle Rear-Zone mode On.

Exit Rear-Zone

1.Touch the Off button on the Rear-Zone menu.
2.Press and hold the SRC button on the front panel.

NOTE: *If DVD is selected as the front source and SD Card can not be selected for the rear source, if SD card is selected as the front source and DVD can not be selected for the rear source .Since the multimedia processor is shared between optical and SD Card media, one or the other can be selected but not both simultaneously.*

Selecting a Source for the Front Zone

Access the Front-Zone menu, and this menu allows you to select a source for the front zone.
You can also use the button on the front panel or on the front remote control.
The AM/FM tuner/iPod/SAT Radio graphics will change to a "blue screen" background when the DVD play or SD Card media is selected from the Rear-Zone menu.

Remote, Smart dial, touch screen operations and buttons on front panel are all useable to control the front source.
The functions of the buttons on the touch-screen are discribed in the next chapters about AM/FM tuner/iPod/SAT Radio.

NOTE: *Optical media and an SD Card cannot be selected from the Rear-Zone Source Menu simultaneously.*

Standby

1. Touch the Standby button on the touch-screen to access Standby mode.
2. In the standby mode, the unit stands in low-power state with audio output only.
3. In the standby mode, you can return to normal screen mode by performing any unit operation.

Tuner Operation

Tuner TFT Display

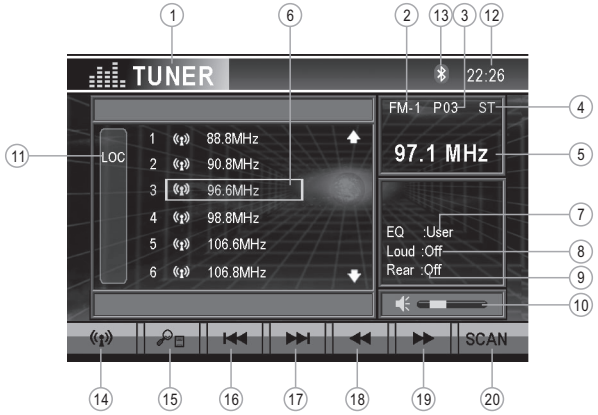

1. Current Source information, touch this area to return to MAIN menu
2. Current Radio Band Indicator
3. Current Preset Station playing Indicator
4. Stereo Broadcast Indicator
5. Radio Frequency Indicator
6. Preset Radio Stations: Touch to recall preset stations or touch and hold to store a station. (total 12 stations a Band can be preset.)
7. System EQ setting
8. Loud Setting Indicator (See “Audio control menu” for instructions.)
9. Rear Zone Playing Mode
10. Volume Indicator.
11. Strong Local Signal Broadcasting Indicator: Touch to active Local/DX function
12. Current time
13. Bluetooth Indicator
14. : Touch to change among the following bands: FM-1, FM-2, FM-3 and AM.
15. : Touch to automatically scan and store stations in current radio band. You also can press the AS/PS button on the front panel.
16. : Touch to seek down.
17. : Touch to seek up.
18. : Touch to tune down once a step.
19. : Touch to tune up once a step.
20. SCAN : Touch to activate/deactivate Scan Mode

Switch to Radio Tuner source

Press the SRC button on the front panel or on the remote control to switch to the Tuner source. You can also access the tuner mode from the MAIN menu directly.

Select FM/AM Band

Touch the button on the screen, or press the BAND button(BAND)on the remote control to change among the following bands: FM-1, FM-2, FM-3 and AM.

Auto Tuning

Press the button (⏭) on remote control or touch the button on the screen to seek the next available channel by increasing the tuning frequency. Press the button again to stop searching.

Press the button (⏮) on the remote control or touch the button on the screen to seek the next available channel by decreasing the tuning frequency. Press the button again to stop searching.

Manual Tuning

Press the ▶▶ button on the remote control or touch the button to increase the tuning frequency one step at a time.

Press the ◀◀ button on the remote control or touch the button to decrease the tuning frequency one step at a time.

Using Preset Stations

12 numbered preset buttons store and recall stations for each band. Front 6 stored stations (P1-P6) for the current band appear on the screen, touch the channel directly to select.

You can touch the arrow buttons ▲ ▼ on the screen to see the other 6 stations.

Storing a Station

1. Select a band (if needed), then select a station.
2. Touch and hold an onscreen preset button (6) for three seconds. The preset number appears at the top of the screen.

Recalling a Station

1. Select a band (if needed).
2. Touch an on-screen preset button (6) to select the corresponding stored station.

Auto Store (AS)

Press the AS/PS button on the panel or Press and hold the button on the screen to automatically scan and store all stations in current band.

Program Scan (PS)

1. Press and hold the AS/PS button on the panel Or press the button on the screen to automatic scan and store strong radio stations in the 12 preset channels in the current band.
2. Touch the SCAN button on the screen to automatically scan all stations in current band to preview stations.
3. Press any button to stop scanning and listen to the selected station.

Local Radio Stations Seeking (LOC)

When the Local function is on, only radio stations with a strong signal are tuned. When the Local function is active, “LOC” appears on the screen and an indicator is illuminated.

To activate the Local function in AM/FM tuner mode, touch the LOC button on the screen .

Touch the LOC again to activate the DX function

DVD Player Operation

NOTE: *When properly installed, DVD video cannot be displayed on the main TFT screen unless the parking brake is applied. If you attempt to play a DVD while the vehicle is moving, the TFT screen displays caution information with a blue background. Rear video screens, if applicable, will operate normally.*

Opening/Closing the TFT Video Screen

Opening the TFT Screen

To open the TFT video screen, press the (⏏) button on the unit or press the (⏏) button on the remote control.

Closing the TFT Screen

Press the (⏏) button on the unit or press the (⏏) button on the remote control again to Close the TFT screen.

Insert/Eject Disc

Inserting a Disc

When inserting a DVD disc, DVD mode is entered and disc play begins.

NOTE: *If Parental Lock (Rating) is activated and the disc inserted is not authorized, the 4-digit code must be entered and/or the disc must be authorized (see “RATING (Parental Lock) Menu”). You cannot insert a disc if there is already a disc in the unit or if the power is off.*

NOTE: *CD-R/RW, DVD-R/RW, DVD+R/RW will not play unless the recording session is closed.*

Ejecting a Disc

Press the button ⏏ on the unit to eject the disc. The unit automatically reverts to Tuner mode at the same time.

Reset the Loading Mechanism

If the disc loads abnormally or does not play properly, press and hold the button ⏏ on the unit to reset the loading mechanism. The disc is ejected and normal operation resumes.

Accessing DVD Mode

To switch to DVD mode when a disc is already inserted, press the SRC button on the front panel or on the remote control till DVD appears at the top of the screen.

Using the Touch-Screen Controls

1.Touch to Play/Pause
2.Touch to stop
3.Touch to fast reverse
4.Touch to fast forward
5.Touch to repeat playback
6.Touch to repeat from A to B. Select the repeat point A wherever you want to start and the point B wherever you want to end, then, DVD displays from A to B continually.
7.Touch to choose a language, if the disc is recorded in multiple languages.
8.Touch to display Sub-title
9.Touch to return to DVD main menu

Controlling Playback

Stopping Playback

Touch the stop button on the screen or press the (■/BAND) button on the remote control to stop DVD play; touch the play/pause button ►/II on the screen or the (OK) button on the remote Control to resume disc play.

Pausing Playback

Touch the play/pause button ►/II on the screen to suspend or resume disc play.

Repeat Playback

Press the Repeat button on the screen or on the remote control to alter repeat mode according to the following:

• DVD: Repeat Title, Repeat Chapter, Repeat Off
• VCD (PBC Off): Repeat Single, Repeat Off
• MP3: Repeat Single, Repeat Folder, Repeat Off

NOTE: For VCD play, the repeat function is not available if PBC is on.

PBC (Play back Control) (VCD Only)

For VCD with play back functionality, play back control (PBC) provides additional controls for VCD playback.

Press the (ROOT) button on the remote control to toggle the PBC function “On”/”Off”. Once PBC is on, playback starts from track one of the play list.

NOTE: *When PBC is activated, fast forward, slow playback, and previous/next track are available. Repeat and direct track selection are not available. When PBC is activated, selecting random, scan, or search playback automatically deactivates PBC.*

Sectional Repeat Function (A-B)

Use the A-B function to define a specific area of a disc to repeat.

• Press the Repeat A-B button (A→B) on the screen or on the remote control to set the start point (A) of the repeated section.
• Press the Repeat A-B button (A→B) again once you reach the desired end point (B) of the repeated section. The selected portion of the DVD will now repeat continuously.
• Press the Repeat A-B button (A→B) again to cancel the A-B section setting and stop repeat play.

Accessing the DVD Menu

1.You can touch the area F, and then touch the button to recall the main DVD menu.

2.Use the arrow buttons on the remote to select a title from the menu.
3.Press the (TITLE) button on the remote control to select a different title for playback.
4. Press the (OK) button on the remote control or touch the item directly to confirm your selection and begin playback.

Moving Through Chapters

Press the (▶▶|) button on the remote control to advance to the next chapter on the DVD.
Press the (|◀◀) button on the remote control to move to the previous chapter on the DVD.
Touch the right side of the screen to advance to the next chapter, or touch the left side of the Screen to move to the previous chapter.

Fast Forward/Fast Reverse

Press the (▶▶) button on the remote control or touch the ▶▶ of area E on the screen to fast forward. Keep pressing or touching and releasing the button to increase the rate from “2X” to “4X”, “8X”, and “20X”.

Press the (◀◀) button on the remote control or touch the ◀◀ of area E on the screen to fast reverse. Keep pressing or touching and releasing the button to increase the rate from “2X” to “4X”, “8X”, and “20X”.

Selecting 2-Channel and 6-Channel Audio Playback

2-Channel Audio (Down Mix) Support for CD, SD Card and DVD

Linear pulse code modulation (LPCM) and pulse code modulation (PCM) support is available for CD, SD Card and DVD discs when 2-channel audio is selected.

6- Channel Audio Support for CD, SD Card and DVD

Surround I is available for decoding analog or digital 2- channel down mixed sources.
Surround II is available for decoding digital bit-stream sources.

NOTE: *Only 2-Channel audio support is available for AM / FM tuner, Auxiliary input.*

Speaker Output Options

Speaker Setup	Front speaker	Rear Speaker	Center Speaker	Sub- Woofer
2CH mode	*	*		
Play 2CH audio in 6CH mode with surround “off”	*			
Play 2-channel (DownMix) audio in 6-channel mode with surround “on”	*	*	*	*
Play 6-channel audio in 6-channel mode with surround “on”	*	*	*	*

GOTO Search

During DVD or VCD playback, perform the following steps to use the GOTO feature to access a specific location on a disc:

1. Press the(-/--) button on remote control or touch Area F on the screen to enter “GOTO” mode.
2. Press the (▲ / ▼) buttons on the remote control to select a category.

• For DVD mode, you can choose Time or Title/ Chapter search.
• For VCD mode, press the(-/ --) button to choose between Track Search, Disc Search and Exit.

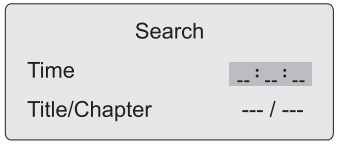

DVD Search
Time-Go to specific time in current title
Title/Chapter-Go to specific chapter in a title

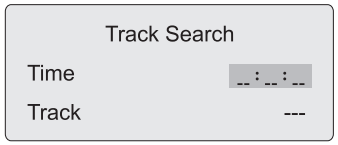

VCD Track Search
Time-Go to specific time in the current track
Track-Go to specific track

3. Touch the(_:_:_)/ (--- /---) area on the screen to display a numeric keypad on the touch Screen.

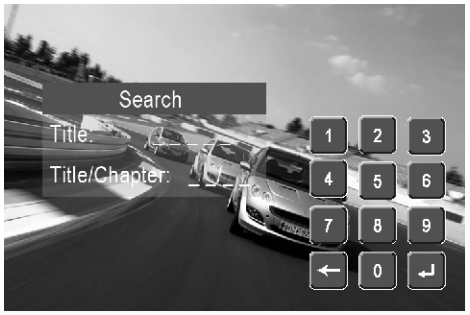

4. Enter a time/Track number into the field using the numeric keypad on the remote control or on the screen.
5. Press the OK button on the remote control or on the touch screen to go to the specified Location on the disc.
6. Press the (-/--)button on the remote control or touch the F Area on the screen again to exit.

Direct Chapter / Track Selection

During DVD, VCD and CD playback, you can use the numeric keypad on the remote control to access a track directly.

Viewing an Alternate Picture Angle (DVD Only)

Some DVDs contain scenes that have been shot simultaneously from different angles. For discs recorded with multiple angles, press the (ANGLE) button on the remote control to toggle available angles of the on-screen image.

Zooming

Press the ZOOM button on the remote control to enlarge and pan through the video image using the following options: “Q1”, “Q2”, “Q3”, and “OFF”.

Multi-Language Discs (DVD Only)

Changing Audio Language

If you are watching a disc recorded in multiple languages, press the (AUDIO) button on the remote control to choose a language. You also can touch area E, and then touch the button.

NOTE: *During VCD playback, press the (AUDIO) button on the remote control to choose between Left Channel, Right Channel, and Stereo.*

Changing Subtitle Language

If you are watching a disc recorded in multiple languages with subtitles, press the (SUB-T) button on the remote control to choose the language in which you would like the subtitles to appear. You also can touch area E, and then touch the SUB T button.

Playback Information

During DVD and VCD playback, press the (INFO) button on the remote or press the DISP button on the front panel or touch the area B to display playback information on the screen,including the media playing and current playback time.

DVD Playback Information

The following information is displayed at the top of the screen during DVD playback:

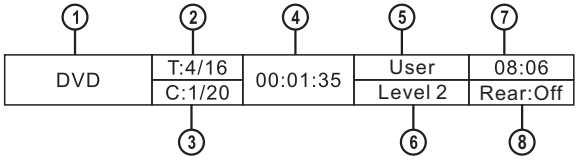

1.Indicates Current playing source.
2.Indicates the forth of 16 titles on the DVD is currently playing.
3.Indicates the first of 20 chapters on the DVD is currently playing.
4.Indicates the playback time of the current title.
5.Indicates EQ setting (or decoding mode when listening to a DVD with 5.1 surround sound.)
6.Indicates the Loud Setting.
7.Indicates the current system time.
8.Indicates the current playback source of the rear zone.

VCD Playback Information

The following information is displayed at the top of the screen during VCD playback:

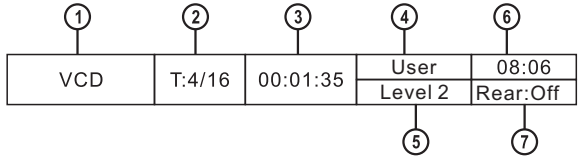

1.Indicates Current playing source.
2.Indicates the forth of 16 tracks on the DVD is currently playing.
3.Indicates the playback time of the current title.
4.Indicates EQ Setting.
5.Indicates the Loud Setting.
6.Indicates the current system time.
7.Indicates the current playback source of the rear zone.

General Disc Information

Symbol	12cm Disc Properties	Max Play Time
DVD VIDEO DVD VIDEO	Single side single layer (DVD-5) Single side double layer (DVD-9) Double side single layer (DVD-10) Double side double layer (DVD-18)	(MPEG 2 Method) 133 minutes 242 minutes 266 minutes 484 minutes
COMPACT disc DIGITAL VIDEO	Single side single layer (VCD)	(MPEG 1 Method) 74 minutes
COMPACT disc DIGITAL AUDIO TEXT	Single side single layer	74 minutes

Disc Symbols

Symbol	Meaning
8	Number of voice languages recorded. The number inside the icon indicates the number languages on the disc (maximum of 8).
32	Number of subtitle languages available on the disc (maximum of 32).

Symbol	Meaning
9	Number of angles provided (maximum of 9).
16:9 LB	Aspect ratios available. “LB” stands for Letter Box and “PS” stands for Pan/Scan. In the example on the left, the 16:9 video can be converted to Letter Box video.
ALL	Indicates the region code where the disc can be played. • Region 1: USA, Canada, East Pacific Ocean Islands • Region 2: Japan, Western Europe, Northern Europe, Egypt, South Africa, Middle East • Region 3: Taiwan, Hong Kong, South Korea, Thailand, Indonesia, South-East Asia • Region 4: Australia, New Zealand, Middle and South America, South Pacific Ocean Islands/ Oceania • Region 5: Russia, Mongolia, India, Middle Asia, Eastern Europe, North Korea, North Africa, North-West Asia • Region 6: Mainland China • ALL: All regions

DVD SETUP MENU

In “DVD Setup” mode, “LANGUAGE”, “ASP SET”, “VIDEO”, “SPEAKER” “SURROUND” and “RATING” (parental lock) are available for setup. This operation can be performed using rotary encoder, the remote control or touch screen.

Accessing the DVD Setup Screen

If DVD is selected as the current playing source, you can access the DVD setup screen through following methods:

• Press the SMART DIAL on the front panel or touch area A to access the MAIN menu, and then Touch the DVD TOOLS button to access DVD Setup Screen.

• Press the (MENU) button on the remote control , press the direction button to select DVD TOOLS and press the (OK)button to access.

Accessing a Menu

To access a menu (LANGUAGE .ASP SET, VIDEO, SPEAKER. SURROUND, RATING), press the direction buttons on the remote control to highlight the desired menu. You can also touch the on-screen menu selection to access that menu.

NOTE: *Once the DVD setup is complete, the settings are memorized. If you want To restore the factory default settings, please use the “Load Factory “ in the RATING Menu. (See RATING Menu.)*

Selecting a Feature for Adjustment

Once inside a menu, press the (▲ / ▼) on the remote control or touch the item directly to select the feature to be adjusted.

Adjusting a Feature

1. Enter the option field for the feature you want to adjust by pressing the (OK) button on the remote or by pressing SMART DIAL. A submenu appears in a second row with the selected option.
2. Select a new value by pressing the (◄ / ►) buttons on the remote control or rotate clockwise or anticlockwise the SMART DIAL.
3. Confirm your selection by pressing the (OK) buttons on the remote control, or press the SMART DAIL. The new setup is completed.

LANGUAGE Menu

If a DVD supports more than 1 Subtitle or Audio language, all the languages are available for selection during playback. If the selected language is not supported by the DVD, then the default language is used. During playback, press the (SUBT)or (AUDIO) button on the remote control to Change the language directly. This will not affect the DVD menu settings.

LANGUAGE Menu Features

Setting	Options	Function
Subtitle	English	Select the default language which you would like subtitles (if applicable) to display.
	Auto	
	Off	
Audio	English	Select the default language which you would like to listen to (if optional).

Setting	Options	Function
DVD menu	English	Select the default language which you would like the DVD menu (if applicable) to display
External Subtitle	English	Select the default External language which you would like the subtitle (if applicable) to display.
	Western European	
	Central European	

ASP SET Menu

The unit has a built-in Pink Noise generator to help set the relative speaker levels for multi-channel audio playback.

ASP SET Features

Setting	Options	Function
Pink noise	Off	Stop output of pink noise
	Left	Left channel pink noise
	Right	Right channel pink noise
DRC	Off	Employ the Dynamic Range Control for better playback for low volumes.
	On	
Center Control	5ms	Adjust the time difference between the center and front speakers to create a time delay between 1 and 5 milliseconds, producing a more accurate audio effect.
	4ms	
	3ms	
	2ms	
	1ms	
	0ms	
Rear Control	15ms	Adjust the time difference between the rear and front speakers to create a time delay between 3 and 15 milliseconds, producing a more accurate audio effect.
	12ms	
	9ms	
	6ms	
	3ms	
	0ms	
Down Sampling	Off	Normal Output
	On	Audio signal output at 48kHz

NOTE: *When Down Sampling is On, the audio output signal will be converted to 48kHz. When Down Sampling is Off, the original sampling frequency is preserved.*

VIDEO Menu

VIDEO Menu Features

Setting	Options	Function
TV Shape (Aspect Ratio)	4:3	Image is presented in wide view with a 4:3 aspect ratio.
	16:9	Image is presented in wide view with a 16:9 aspect ratio.
Angle Mark	On	Angle indicator (if applicable) is shown.
	Off	Angle indicator is not shown.
View Mode	FILL	
	Original	
	H FIT	
	W FIT	
	Fit to Scrn	
	Pan Scan	

NOTE: *For standard discs not formatted for "widescreen", use of the 16:9 aspect ratio will result in image distortion.*

SPEAKER Menu

Speaker Menu Features

Setting	Options	Function
Speaker Mode	Full 6CH	6-channel mode
	DownMix	2-channel mode. If you select this mode, the selections below will not be available.
Front	Large	Use when front speakers have good bass output.
	Small	Use when front speakers do not have good bass output.
Surround	Large	Use when rear speakers have good bass output.
	Small	Use when rear speakers do not have good bass output.
	None	Use when rear speakers are not present.
Subwoofer	Present	Use when subwoofer is present.
	None	Use when subwoofer is not present.
Center	Large	Use when center speaker has good bass output.
	Small	Use when center speaker does not have good bass output.
	None	Use when center speaker is not present.

Speaker Selection

Selecting LARGE for the multi-channel speaker option will give a full range output. Selecting SMALL for the multi channel speaker option will activate a high pass filter whose crossover is dependent upon the sub-woofer low pass filter frequency. For example, if the subwoofer low pass filter is set to 80Hz, then the high pass SMALL speaker crossover will be set to 90Hz.

Low pass	High pass
80Hz	90Hz
120Hz	135Hz
160Hz	180Hz

RATING (Parental Lock) Menu

The DVD system has a built-in parental lock feature to prevent unauthorized persons from viewing restricted disc content. By default, the rating system is unlocked. Once setup, the parental lock is released only by entering the correct password. Once the password is entered, rating is available for setup.

RATING Menu Features

Setting	Options	Function
Password	----	Enter a 4-digit password to activate the "Rating" feature.
Rating	1. Kid Safe	Select the appropriate rating level for the intended audience. You may override higher ratings by using your password.
	2. G	
	3.PG	
	4. PG-13	
	5. PG-R	
	6. R	
	7. NC-17	
	8. ADULT	
Load Factory	No	Select "Yes" to restore the factory default settings for the DVD setup only (except the password and parental lock setting).
	Yes	

To reset the password, access the "RATING" menu and enter the current password. Once the correct password is entered, you can access the "Password" field and enter a new one.

NOTE: *Record the password and keep it in a safe place for future reference. The rating for each disc is marked on the disc, disc packing, or documentation. If the rating is not available on the disc, the parental lock feature is unavailable. Some discs restrict only portions of the disc and the appropriate content will play. For details, please refer to the disc description.*

CD/MP3/WMA/JPEG Operation

Instructions for Insert/Eject, Play/Pause, Stopping Playback, Track Selection, Fast Forward/Fast Reverse, Scan, and Random Play are the same for DVD, CD and MP3 operation. Please see the DVD Player Operation section for information about these topics.

The file naming formats listed below are compatible with this unit:

• ISO 9660 – file name: 12 characters, file extension: 3 characters

• ISO 9660 – file name: 31 characters, file extension: 3 characters

• Joliet – 64 characters

If the file or folder name does not conform to ISO 9660 file system standards, it may not be displayed or played back correctly.

CD Player User Interface

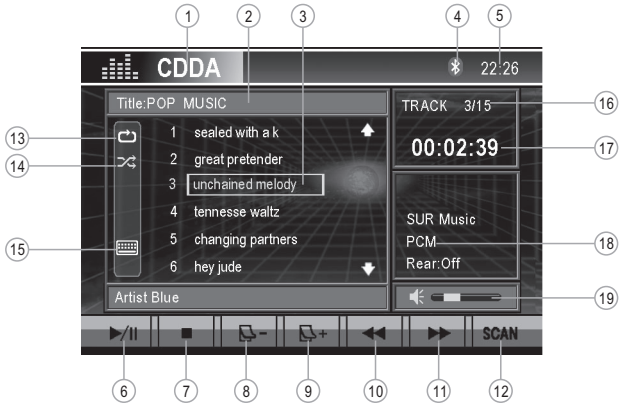

1.Current source indicator, touch this area to access MAIN menu.

2.Disc title

3.Track title

4.Bluetooth indicator

5.Current time

6. ▶/II : Touch to play/pause

7. ■ : Touch to stop disc playback

8. : Touch to turn to the previous page

9. : Touch to turn to the next page

10. ◀◀ : Touch to fast backward current track

11. ▶▶ : Touch to fast forward current track

12. SCAN : Touch to activate/deactivate Scan And you can press the (Title) button on the remote control to toggle the scan function “on/off”

13. : Touch to activate/deactivate Repeat Single Mode

14. : Touch to activate/deactivate Random Mode

15. : Touch to display the numeric keypad on the screen and then you can use the numeric keypad to access a track directly.

16.Current track and total number of tracks on disc

17.Elapsed playing time

18.Playback information

19.Volume indicator

Playing CD Files

After inserting a CD disc, files will play in the sequence of the directory. In playing back, you can press the numeric button on the remote control or touch a track on the onscreen directly to play.

Previous/Next Page

Touch the or on the screen to navigate through the pages/files.

Fast backward/fast forward

Touch the ◀◀ or ▶▶ on the screen to Fast backward or fast forward play.

MP3/WMA Discs

This player allows you to playback MP3/WMA files recorded on CDROM, CD-R, CD-RW, DVD+R/RW and DVD-R/RW. For CD-RW discs, please make sure they are formatted using the full method and not the quick method to prevent improper disc operation. Use the following settings when compressing audio data for your MP3 disc:

• Transfer Bit Rate: 320kbps

• Sampling Frequency: 48kHz

When recording MP3 up to the maximum disc capacity, disable additional writing. For recording on an empty disc up to maximum disc capacity, use the "Disc at once" setting.

The touch keys for MP3/WMA CD/DVD playback are described below.

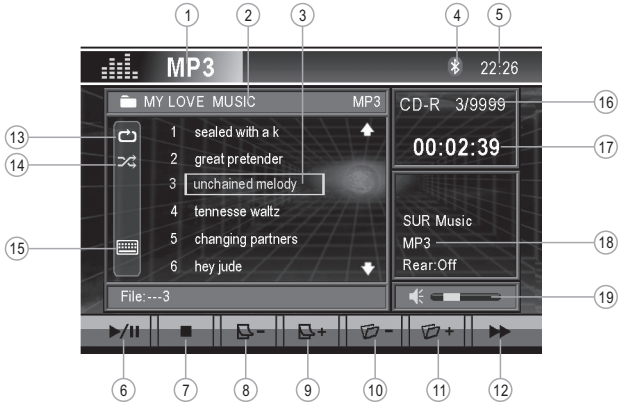

1.Current source indicator, touch this area to access MAIN menu.

2.Disc title

3.Track title

4.Bluetooth indicator

5.Current time

6. ▶/II : Touch to play/pause

7. : Touch to stop disc playback
8. : Touch to turn to the previous page
9. : Touch to turn to the next page
10. : Touch to display previous folder
11. : Touch to display next folder
12. : Touch to fast forward current track
13. : Touch to activate/deactivate Repeat Single Mode
14. : Touch to activate/deactivate Random Mode
15. : Touch to display the numeric keypad on the screen, and use it to access a track directly.
16. Current track /total tracks
17. Elapsed playing time
18. playback information
19. Volume indicator

Playing MP3/WMA Files

After inserting a MP3/WMA disc, files will play in the sequence of the all directory. In playing back, you can press the numeric button on the remote control or touch a track directly to play.

Change Directory/Folder

Touch the or on the screen to navigate through the directories/folders.

Previous/Next Page

Touch the or on the screen to navigate through the pages/files.

JPEG Discs

1. Stop playback and return to the picture list
2. Rotate picture clockwise 90°
3. Rotate picture counterclockwise 90°

SD Card Reader Operation

Accessing SD Card Mode

Insert the SD Card in the slot, and press the SRC button on the front panel to switch to SD Card mode. You can press the (SRC) button on the remote control to switch to the Can also touch the SD icon on the screen form the main menu.

Using the Touch-Screen Controls

The touch keys for SD card playback are described below. The interface is similar to the MP3 mode.

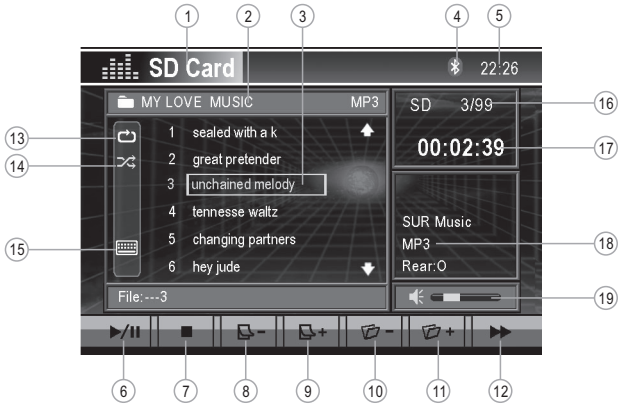

1. Current source indicator, touch this area to access MAIN menu.
2. Folder title
3. Track title
4. Bluetooth indicator
5. Current time
6. :Touch to play/pause
7. : Touch to stop disc playback
8. :Touch to turn to the previous page
9. :Touch to turn to the next page
10. : Touch to display previous folder
11. : Touch to display next folder
12. : Touch to fast forward current track
13. : Touch to activate/deactivate Repeat Single Mode
14. : Touch to activate/deactivate Random Mode
15. : Touch to display the numeric keypad on the screen to access a track directly.
16. Current track /total tracks
17. Elapsed playing time
18. Playback information
19. Volume indicator

iPod Operation

Accessing iPod Mode

1.To switch to iPod mode, press the SRC button on the front panel or the (SRC) button on the remote control repeatedly until iPod appears at the top left corner of the screen.

2. Select the Main menu, then touch the iPod icon to select iPod as your source.

iPod Instructions

The touch keys on the screen for iPod playback are described below.

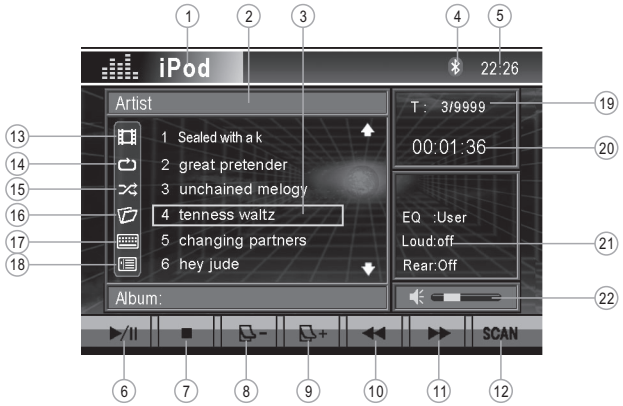

1.Current source indicator, touch this area to access MAIN menu.
2.Artist name
3.Track title / root directory list
4.Bluetooth indicator
5.Current time
6. : Touch to play/pause disc playback
7. : Touch to stop disc playback
8. : Touch to turn to the previous page
9. : Touch to turn to the next page
10. : Touch to fast backward current track
11. : Touch to fast forward current track
12. : Touch to activate/deactivate Scan Mode
13. : Touch to wait for iPod video/photo
14. : Touch to activate/deactivate Repeat Single Mode
15. : Touch to activate/deactivate Random Mode
16. : Touch to access root directory list
17. : Touch to display a numeric keypad on the screen to access a track directly.
18. : Touch to display track list
19.Current track/total tracks.
20.Elapsed playing time
21.Playback information
22.Volume indicator

According to the above instruction 16, when you press the button, the touch screen will display The following.

The TFT displays the root directory list classified by the iPod, from which you can select your favorite songs.

You can choose a play list from your iPod play lists and then select a song to listen to.

Playback of video on iPod

For playback of video on iPod, press the button to enter, the touch screen will display the following.

If there are videos on iPod and you select them on iPod, they will start to play, otherwise there will be nothing on the display. However, you can return to listen to your music by pressing the button again.

NOTE: *All video control functions are done on the iPod video, the touchscreen only controls audio portions of iPod functionality.*

Sat Radio Operation

Accessing Sat Radio Mode

To switch to Sat Radio mode, press the SRC button on the front panel or the (SRC) button on the remote control until SAT appears at the top of the screen. The touch keys for Sat Radio playback are described below.

NOTE: *An optional Terk XM Direct Universal Tuner box(XMD1000) and XM Antenna is required to receive XM Radio, along with a subscription to XM Radio. Check with your dealer for these Optional devices.*

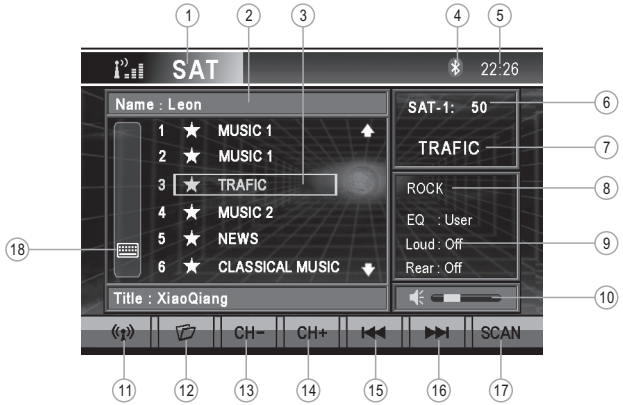

1.Current source indicator, touch this area to access MAIN menu.
2.The artist information of the channel the playing back currently.
3.The preset channel Currently playing back.
4.Bluetooth indicator
5.Current time indicator.
6.Current Band and channel number indicator.
7.Current channel name indicator.
8.Current channel category indicator.
9.Playback information.
10.The volume indicator.
11. : Touch to change among the following bands: SAT, SAT-1, SAT-2 and SAT-3.
12. : Touch to open the category folder list.
13. CH- : Touch to scan the previous available channel of all categories.
14. CH+ : Touch to scan the next available channel of all categories.
15. : Touch to scan the previous available channel of current category.
16. : Touch to scan the next available channel of current category.
17. SCAN : Touch to activate/deactivate Scan Mode.
18. : Touch to display the numeric keypad on the screen to access a channel directly.

Auto Scan

Touch the SCAN button to automatically scan the available channels of all categories.

Manual Scan

Touch the CH- / CH+ to scan the previous/next available channel of all categories.
Touch the / to scan the previous/next available channel of current category.

Storing a Channel

1. Select a band (if needed), then select a channel.
2. Touch and hold an on-screen preset channel for three seconds. The storing process is complete.

Recalling a channel

12 numbered preset channels store and recall channels for each band. Front 6 stored channels (1-6) for the current band appear on the screen, touch the channel directly or use the numeric buttons on the remote control.

You can touch the arrow buttons ( ) on the screen to select other channels.

Bluetooth Operation

Before using the Bluetooth

Before using the Bluetooth, it's necessary to perform the following steps. For more operating details, refer to each section below.

1. Select the "Bluetooth" option in the General setup and select the "On" option to activate the Bluetooth feature.
2. Pair your mobile phone to this unit (refer to the "Pairing" operation). It is necessary to connect your phone to the unit. Without connecting, the Bluetooth is not available.

The Bluetooth Indicator

There is a Bluetooth indicator ( ) at the top of the touch screen.
When the Bluetooth function is "Off", the indicator is grey.
When the Bluetooth function is "On" and no phone is connected to the unit, the indicator will blink.
If a phone has been connected to the unit, the indicator is on solid.

Accessing Bluetooth Mode

Access the MAIN menu first and then touch the button on the screen to access Bluetooth mode.
Touch the button at the top of the touch screen to access Bluetooth mode directly.

Bluetooth User Interface

Dial Interface

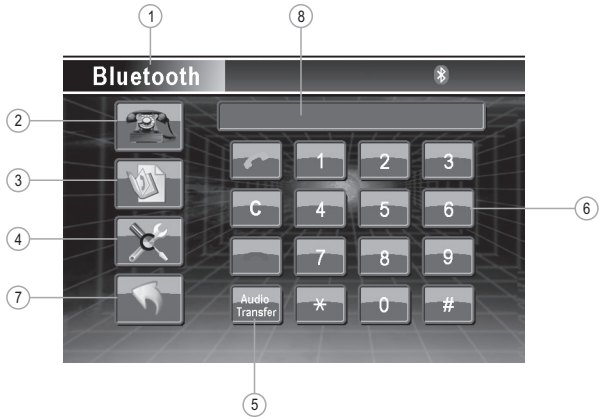

1.Current source indicator, touch this area to access MAIN menu.
2.Touch to access the dial interface.
3.Touch to access the Phone book.
4.Touch to access Bluetooth setup.
5.Touch to switch the audio output between the unit and the mobile phone.
6.Make use of these buttons to achieve some base functions of the phone.

7.Touch to return to the previous menu.
8.Show the phone number and function status.

Phone Book

Press the button to access the Phone Book.

You can see phone book list, SIM book list, dialed call list, received call list, missed call list.
If the number has been stored in the Phonebook, it can be accessed by touching or on the screen to navigate through the Phone Book entries. Then, touch the number to initiate the phone call
NOTE: *Not all Bluetooth enabled phones support this feature*

Bluetooth setup

Select the button to access the Bluetooth setup.

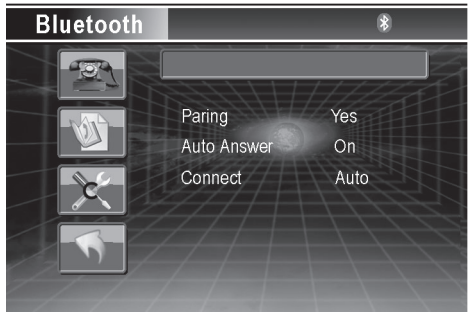

LANGUAGE Menu Features

Setting	Options	Function
Pairing	Yes	Press the "Yes" button to start to wait for pairing with one phone.
Auto Answer	Off	Answer an incoming call manually.
	On	The unit will automatically answer an incoming call (based on the cell phone Bluetooth functions)

Setting	Options	Function
Connect	Manual	If this function is set to Auto, connection between the Last Used phone and this unit will take place automatically as soon as the devices are less than a few meters apart.
	Auto	

Pairing

Access the Bluetooth setup and press “Yes” option on the screen, then “Wait pairing” displays on the screen. Now you can pair a phone with the unit.

This unit can pair with 4 mobile phones in all, but just one can be active at a time.

The Default phone will be retained only if all other paired phones are deleted. (Default Phone: The phone that was first paired with the unit.)

When maximum pairing has been completed, that is, four mobile phones have been connected with the unit, and you want to still pair a new one, then the system will retain the default phone and last used phone used. The phone least used (except the default phone) will be deleted and the new paired phone will become the last used phone. (Last Used Phone: The phone connected with the unit that was used last.)

If you want pair your phone with the unit, the password 1234 is used to complete the pairing. When asked, enter this password in the phone you are pairing with this unit.

Auto Connect

If the unit has been set to auto connect, it will attempt to connect to the last used phone first. If Auto Connect is not activated, the unit will return to the previous operating mode.

When the phone connects to the unit successfully, all of the cell phone’s Bluetooth enabled options will be active.

Making a phone call

There are four ways to make a phone call from this unit:

1. Make use of the Number dial on the screen to make a call.
2. You can enter the phone number using the numeric keypad and press the OK button on the remote control to make a call. (must be in the Bluetooth mode)
3. You can open the phone book and select one to make a call directly. (Your cell phone must support this option)
4. If your phone supports voice dial, access this mode on your phone instead of using the Phonebook

Answering an incoming call

You can answer an incoming call even if the source other than the telephone is selected.

You can answer an incoming call automatically or manually (refer to Bluetooth setup and the Controls and Indicators title (Button Operation) for exact instructions)

When a call comes in, this interface will display on the screen:

End a call

Press the ESC button on the remote or touch the icon to end a call.

NOTE: *Not all handsets are compatible with the Bluetooth hands free system. Please check the compatibility list if you are experiencing connectivity problems. If you are experiencing operation problems, please contact your installation center for assistance. You may have an incompatible handset and your unit is functioning normally.*

Navigation Operation

Access the Navigation mode

1. Access the MAIN menu and select the NAVI button on the touch-screen to enter the Navigation Operation interface.
2. Press the SRC button on the front panel or on the remote control to switch the source to Navigation.

Navigation Operation

Please read the **Navigation Software User Manual**

IMPORTANT INFORMATION:

Make sure that the SD Card with the map information is inserted into the NAV-1 or NAV-2 before installing in the vehicle. It may be hard to access this card slot once the installation is completed.

Follow the instructions on loading mapping information from the DVD-ROM to the SD Card *in the Navigation Software User Manual*. This must be done prior to loading the SD Card into the Navigation Unit.

How to Listening to an Audio program while using/viewing the Navigation

You can listen to an audio program while using Navigation. To do so, do the following:

1. Select the audio source. The source can be the Tuner, Satellite Radio, iPod, or the audio from the AUX input.
2. Touch the NAVI/DISP button to select Navigation. Audio will continue to play while you are in the Navigation mode.
3. Navigation voice prompts will mute the audio source, give the instruction, and then return to the audio source.
4. To adjust a parameter of the audio source (i.e., select a different radio station), touch the NAVI/DISP button. This will return you to the audio source screen. Make your adjustments,and then press the NAVI/DISP button to return the Navigation function.

Navigation will continue while you are in an audio source screen, and voice prompts will continue while you make adjustments.

TROUBLESHOOTING

Provlem	Cause	Corrective Action
GENERAL		
Unit will not power on	Radio Fuse blown	Install new fuse with correct rating
	Car battery fuse blown	Install new fuse with correct rating
	Illegal operation	Press the RESET button located in the bottom right corner of the front panel
Remote control does not function	Battery depleted	Replace battery with new one
	Battery installed incorrectly	Remove battery and install correctly
No/low audio output	Improper audio output connection	Check wiring and correct
	Volume set too low	Increase volume level
	Improper "MUTE" connection	Review wiring diagram and check "MUTE" connection
	Speakers damaged	Replace speakers
	Heavily biased volume balance	Adjust the channel balance to the center position
	Speaker wiring is in contact with metal part of car	Insulate all speaker wiring connections
Poor sound quality or distortion	Unauthorized disc is in use	Use original copy
	Speaker power rating not compatible with unit	Connect proper speakers
	Speaker is shorted	Check speaker connections
Tel-Mute malfunction	"MUTE" wire is grounded	Check that "MUTE" connection is not grounded and that it's properly insulated
Unit resets itself when engine is off	Incorrect connection between yellow memory wire and positive battery wire	Check wiring and correct
TFT MONITOR		
Monitor does not open automatically	TFT Auto Open is turned off	Turn TFT Auto Open on
No image	Incorrect connection to parking brake wire	Check wiring and correct
	PRK SW is activated and parking brake is not engaged	Stop vehicle in safe place and apply parking brake

Prolonged image or improper height/width ratio display	Improper video signal connections	Check wiring and correct
	Improper aspect ratio setup	Use correct aspect ratio setting
Monitor stops at incorrect position	Moving path is blocked	Press OPEN key to restart monitor movement
TUNER		
Weak station searching	Auto antenna is not fully extended	Connect the auto antenna control cable properly
	Auto antenna not properly connected	Connect the auto antenna control cable properly
	LOCAL function is activated	Turn LOCAL function off
DISC		
Cannot insert disc	Disc already inside unit	Eject current disc and insert new one
Disc does not play back	Disc is warped or scratched	Use disc in good condition
	Disc is dirty or wet	Clean disc with soft cloth
	Incompatible disc is used	Use compatible disc
	Disc rating exceeds Parental Lock rating limit	Change Parental Lock settings to lower restriction
	Disc region code is not compatible with unit	Use disc with proper region cod
	Disc is inserted upside down	Insert disc with label side up
Image blurred, distorted, or dark	Disc is illegally copied	
PBC cannot be used during VCD playback	PCB is not available on the disc	Use original disc
No repeat or searching while playing VCD	PCB is on	Turn PCB off
MP3		
Interruption occurred during playback	Disc is dirty or scratched	Clean disc or replace
	File is damaged/bad recording	Recreate disc with good files
Incorrect playback message displayed	Message is longer than LCD can display	

Error Messages

Messages Displayed	Cause	Corrective Action
Loading	Disc is being read	
No Disc	Disc is dirty	Clean disc with soft cloth
	Disc is upside down	Insert disc with label side up
	Disc not present in loading compartment	Insert disc
Bad Disc	Disc is dirty	Clean disc with soft cloth
	Disc is upside down	Insert disc with label side up
Unknown disc	Disc format is not compatible with this unit	
Region Error	DVD is not compatible with region code of unit	
Error	illegal mechanism operation	Press EJECT key for 5 seconds to reset loading mechanism

Remote control

Remote control does not function	Battery is covered with insulation tape	Pull out the insulation tape
	Battery depleted	Replace battery with new one
	Battery installed incorrectly	Remove battery and install correctly

1. When using the remote for the first time, you must pull out the insulation tape.

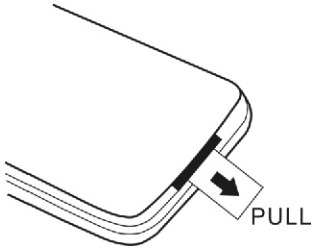

2. Remove the battery if the remote control is not used for a month or longer.
Remove and dispose of the old battery immediately.
Do not store the battery with metallic materials.
3. Inserting/Replacing the Battery:
Remove the battery holder

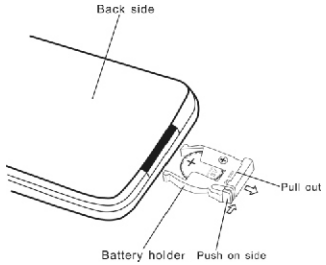

Remove the battery from the battery holder

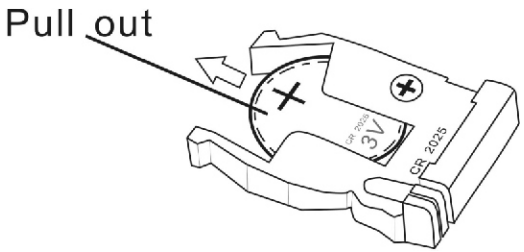

Install the battery

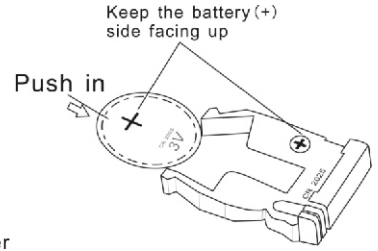

Insert the battery holder

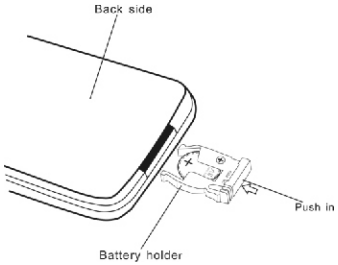

NOTE: *Use only one CR2025(3V) lithium battery.*
Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
Do not recharge, disassemble, heat or dispose of the battery in fire.
Keep batteries away from children to avoid the risk of accident.

Suggestions

1. Only use a piece of clean silicone cloth and neutral detergent to clean the front panel or monitor. A rough cloth and non neutral detergent (such as alcohol) may result in scratching or discoloration.
2. Keep off water and other liquid things.
3. If the temperature inside the player gets too high, a protective circuit automatically stops playing the disc. And then, please wait for the unit to cool down before operating the player again.
4. Never insert anything other than a 5” (12 cm) compact disc into the player as the mechanism can be damaged by foreign objects.
5. Do not attempt to use a 3” (8 cm) CD-Single disc in this unit, either with or without an adaptor, as it will damage the player and disc. Such damages are not covered by the Warranty on this product. 6.When the vehicle warms up during cold weather or under damp conditions, condensation may appear on the LCD panel. If this occurs, the screen will not operate properly until the moisture has evaporated.
7.We suggest that you should clean the discs used in this unit more frequently than used in your home, because of the environmental conditions of the vehicle.

Specifications

Power Ratings

Main Amplifier

Power Output: 20 watts X 4 channels into 4-ohms @ < 10% THD+N
Signal to Noise Ratio: 70dBA below reference. (Reference: 1 watt, 4-ohms)
MAX Power: 50 X 4 watts into 4-ohms, all channels driven
Frequency Response: 20Hz to 20 kHz, -3dB. Aux input used as source reference
Reference Supply Voltage: 14.4VDC

DVD/CD Player

Compatible formats: DVD-R, DVD-RW, DVD+R, DVD+RW,
CD-R, CD-RW, CD-DA, MP3, WMA, HDCD, SVCD, VCD,
MPEG, JPEG, MP3/WMA files burned onto a DVD+R/W or
DVD-R/W and CD-R/RW
Signal to Noise Ratio: 85dBA
Dynamic Range: >95dB
Frequency Response: 20Hz to 20 kHz, -3dB
Channel Separation: > 60dB @ 1kHz
D/A Converter(s): 6-channel high performance 24-bit, 192 kHz, multi-bit Sigma Delta modulation.
DAC supports sample rates from 8~192 kHz.
Mechanical anti vibration ability: 10~200Hz, X/Y/Z direction: 1.0G

Video Section

Format: NTSC, PAL (auto-detection)
Output: 1Vp-p (75-ohm), buffered
Input: 1Vp-p (75-ohm)

FM Tuner Section

Tuning Range: 87.5MHz 107.9MHz
Mono Sensitivity (-30dB): 10dBu
Quieting Sensitivity (-50dB): 15dBu
Alternate Channel Selectivity: 70dB
Signal to Noise Ratio @ 1kHz: 58dB
Image Rejection: 60dB
Stereo Separation @ 1kHz: 30dB
Frequency Response: 30Hz - 15kHz, -3dB

AM Tuner Section

Tuning Range: 530kHz - 1710kHz
Sensitivity (-20dB): 20dBu
Signal to Noise Ratio @ 1kHz: 50dB
Image Rejection: 60dB
Frequency Response: 50Hz - 2kHz, -3dB
Integrated SD Card Reader

Monitor Section

Screen Size: 7" (Measured diagonally).
Screen Type: TFT Liquid Crystal Display (LCD) active matrix
Response Time: 22mSec rise time, 44mSec fall time
Resolution, DVD/Composite Video in: 336,960 sub pixels,
1440 (W) X 234 (H)
Viewing angle:
45-60 degrees left or right
20-30 degrees up
40-60 degrees down

General

Auxiliary Input impedance: 10k
Power Supply: 10.5 to 16V DC, negative ground
Fuse: 10-amp, mini ATM type
DIN chassis dimensions: 178mm x (165+25)mm x50mm
* Specifications subject to change without notice.